



# Instruction Manual

## Installation

- 1 Please pay attention to driving method and rotating direction of rolls, and install rolls parallelly and horizontally.
- 2 Lifting wire ropes should not touch directly on the surface of the roll, and Do not put the roll directly on the claws of a forklift.

## Using

- 1 Appropriate width of overlapping bristles of upper roll and lower roll should be approximately 0~2mm (our standard). Excessive overlapping may cause generating heat, broken and fallen of bristles.
- 2 Please be careful of unbalanced pressure on the roll.  
Please check if upper and lower rolls are installed in parallel under balanced pressure.  
Unbalanced pressure may cause deformation and/or generating heat on the roll.
- 3 Please be careful of static electricity may caused by high polymer fibers consisting of bristles.

## Storage and Transportation

- 1 Please put the roll in the dedicated packing box or put on the pillow stands, not to directly contact on the floor, on the transportation and storage.
- 2 Please be careful of changing quality with time under the environment of long-time storage.